



OPERATING INSTRUCTIONS for Number Combination Lock “Secumatic” with 1,000,000 real possibilities

Opening the safe:

All the safes equipped with a number combination-lock are preset by manufacturer 1, 2, 3, 4, 5, 6.

You can open the safe by giving the lock-knob one turn to the right (position green). If you keep on turning the knob, the combination disappears so that nobody can read the code while the safe is open.

Locking the safe:

The safe can be locked by giving the lock-knob half a turn to the left, the safe can be reopened without input of the code (position yellow).

Securing the safe:

If you want to open the safe only by input of your code, give the lock-knob one turn to the left (position red).

Changing of the code:

Open the safe, secure the lock (by opened door!), enter the current code and give the lock-knob **half a turn** to the right (position yellow).

Enter the new code as follows:

Introduce the enclosed screwdriver into one of the little holes at the inner side of the door and loosen the screw by giving it 9 turns to the left. Now enter the new number by putting the corresponding slider at the front of the door to the new number.

Tighten the screw by giving it 9 turns to the right.

Proceed in the same way to change the 6 numbers of your code.

IMPORTANT!

- Remember your new code and keep it carefully.
- Do not take personal data (e.g. your birthday).
- **Verification of your new code is mandatory!**
- Test your new code WHILE THE DOOR IS OPEN!
- Enter your new code, open and close the lock at least 5 times.

If you do not know your code anymore, there is no possibility to open the safe.

Please use the enclosed screwdriver for cross-recessed screws, size 0.